


PARTS LIST:

ASSEMBLY INSTRUCTIONS FOR FUN3530 SCARY SURPRISE ANIMATED CLOWN

THIS IS NOT A TOY. 14+ AGE. PLEASE FOLLOW DIRECTIONS FOR EASY SET-UP.

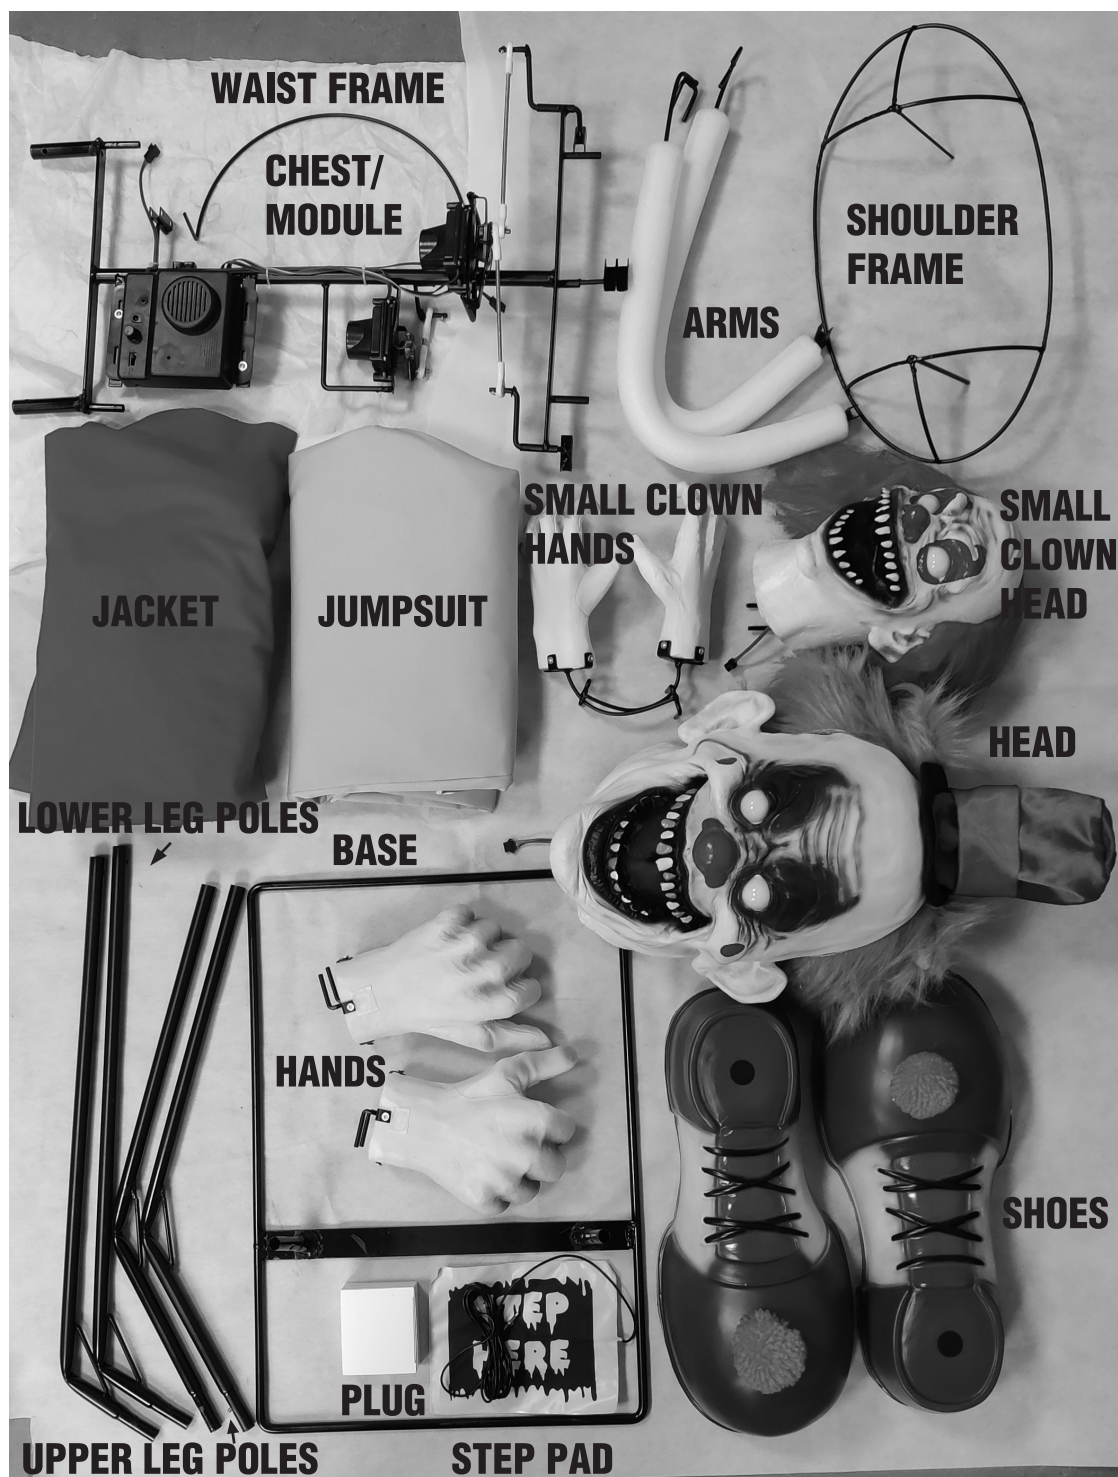

ONCE ASSEMBLED AND PLUGGED-IN, SURPRISE CLOWN WILL HAVE MOVING HEAD, MOVING MOUTH (BOTH CLOWNS), LIGHT-UP EYES (BOTH CLOWNS), JACKET-OPEN/CLOSE MOVEMENT AND AUDIO. ITEM WORKS WITH OR WITHOUT STEP PAD. WHEN POWER SWITCH IS SET TO ON, SURPRISE CLOWN IS ACTIVATED BY SOUND SENSOR. TO ACTIVATE BY STEP PAD, SET POWER SWITCH TO OFF. KNOB ON MODULE ADJUSTS VOLUME.

SURPRISE CLOWN WILL BE BUILT FROM THE FLOOR UP.

STEP 1

- Lay Base on floor, larger section forward.
- Insert Lower Leg Poles through Shoes and connect to Base.
- Connect Upper Leg Poles.



STEP 2

- Add Jumpsuit over legs. Purple sleeves in front.
- Connect Chest/Module to top of Upper Leg Poles. Speaker should face back.
- Add Waist Frame to bottom of Chest/Module, facing forward.



STEP 3

- Lift Jumpsuit over Chest/Module.
- Attached Small Clown Hands to Chest/Module through purple sleeves.
- Connect wires running out of bottom of speaker box to wires inside Small Clown Head.
- Attach Small Clown Head to Chest/Module through round purple opening.
- Connect Shoulder Frame to top of Chest/Module.



STEP 4

- Connect Head to top of Chest/Module. Connect wires from speaker box to wires in Head.
- Insert Plug into speaker box using jack to the left of the volume knob. Insert Step Pad (optional) into jack on far left of speaker box.
- Drape Jumpsuit over Shoulder Frame and close around neck and in back.



STEP 5

- Drape Jacket over Shoulder Frame. Insert Arms through sleeves and connect at shoulder.
- Connect Hands to bottom of Arms.



STEP 6

- Bend Arms so that they are in closed-jacket position. Secure Jacket lapels to Hands so Jacket stays closed.

