

PARTS LIST:

ASSEMBLY INSTRUCTIONS FOR FUN4162 HEADLESS HORSEMAN
THIS IS NOT A TOY. 14+ AGE. PLEASE FOLLOW DIRECTIONS FOR EASY SET-UP.



ONCE ASSEMBLED AND PLUGGED-IN, HEADLESS HORSEMAN WILL HAVE LIGHT-UP PUMPKIN, SIDE TO SIDE MOVEMENT AND AUDIO. ITEM WORKS WITH OR WITHOUT STEP-PAD. WHEN POWER SWITCH IS SET TO ON, HEADLESS HORSEMAN IS ACTIVATED BY SOUND SENSOR. TO ACTIVATE BY STEP-PAD, SET POWER SWITCH TO OFF. KNOB ON MODULE ADJUSTS VOLUME.

HEADLESS HORSEMAN WILL BE BUILT FROM THE FLOOR UP.

STEP 1

- Lay base on floor, pegs in back.
- Connect Leg Poles to Base pegs, 3 poles on each side.
- Add boots over poles.
- Add Pants over poles.




STEP 2

- Connect Speaker/Module to top of Leg Poles. Speaker facing back.
- Add Waist Ring to bottom of Speaker/Module.
- Add Chest Ring to middle of Speaker/Module.
- Add Shoulder Frame to top of Speaker/Module.



STEP 3

- Pull up pants and wrap around Waist Ring.
- Drape Shirt over Shoulder Frame.
- Feed wire from Speaker/Module through right arm sleeve. This will connect to the right arm (with pumpkin).
- Connect Arms to Shoulder Frame through sleeve.
- Connect Hands to Arms. Left arm has axe. Right arm has pumpkin.
- Connect wire from Speaker/Module to wire on right hand (with pumpkin).

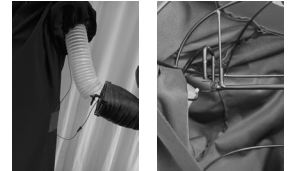

STEP 4

- Connect Plug and Step Pad to jacks in Speaker/Module. Run wires out bottom of shirt to the floor.
- Extend sleeves to meet hands and connect velcro at wrist.
- Add Cape.

