

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

FUN4250 Snarling Werewolf with LifeEyes LCD Eyes™



Please follow the step by step guide and enjoy your Snarling Werewolf!

CARE AND STORAGE INSTRUCTIONS

For best performance, operate your item indoors. When not in use, store this product in its original packing. Keep away from heat and moisture.

WARNING


This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep all away from the adapter, as it heats up during operation.

Please read all instructions carefully before assembling. Save this instruction sheet for future reference.


PARTS LIST

- A. Base x 1
 - B. Feet x 2
 - C. Lower Support Poles x 2
 - D. Support Poles x 2
 - E. Pants x 1
 - F. Leg Inserts x 2
 - G. Torso Frame x 1
 - H. Chest Frame x 1
 - I. Back Frame x 1
 - J. Shirt x 1
 - K. Right Arm x 1
 - L. Left Arm x 1
 - M. Head x 1
 - N. Sensor x 1
 - O. Adapter x1
- Input: 100 - 240V AC 50/60Hz
Output: 5.9V 2A

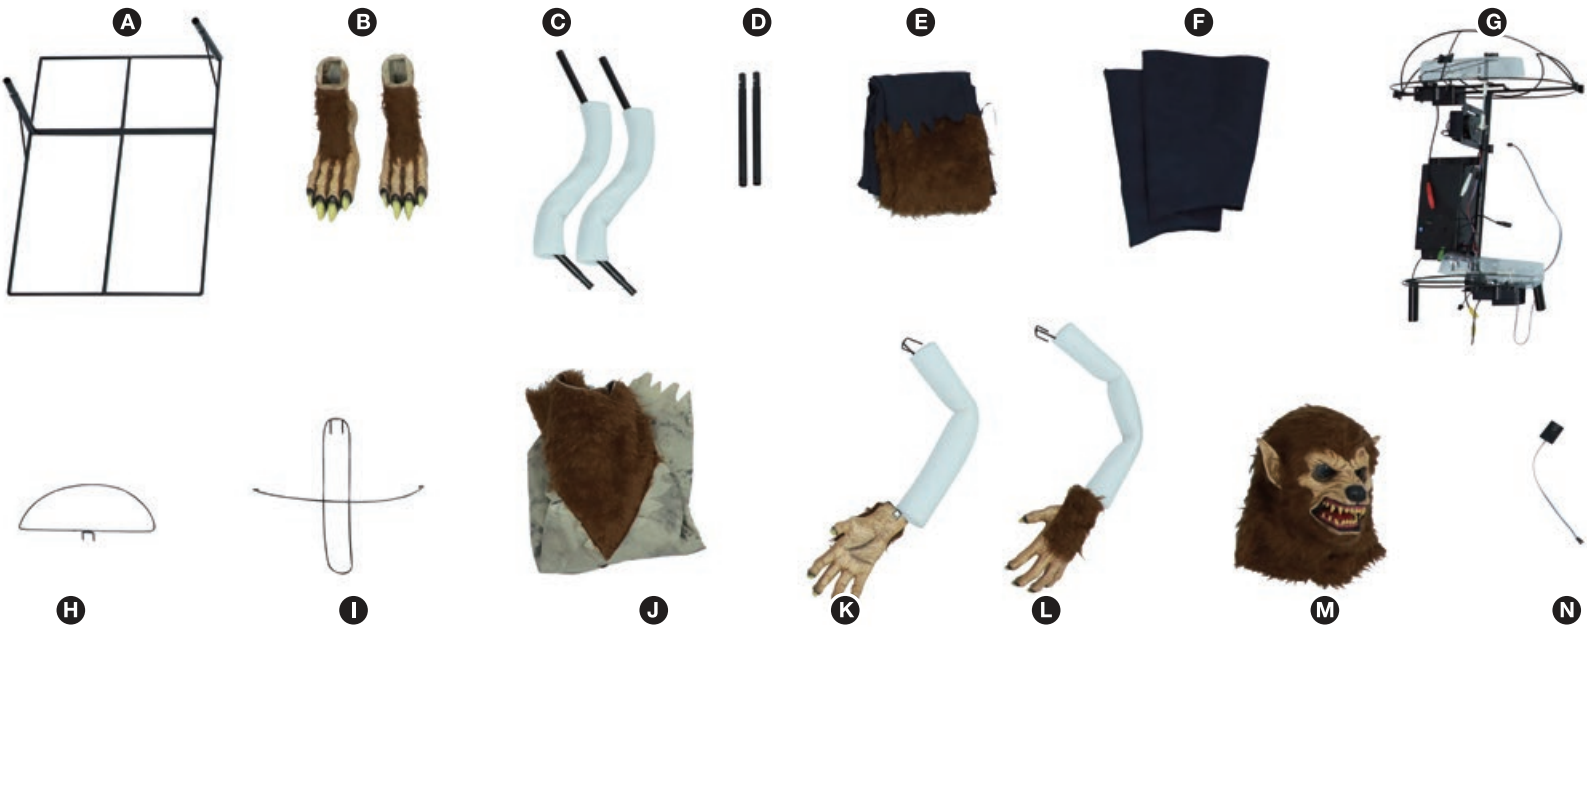


BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT AND CONTACT CUSTOMER SERVICE AT CUSTOMERSERVICE@SVIUS.COM, OR BY PHONE FROM 8:30AM TO 5:30PM PST AT 1-855-428-3921.


Assembly Instructions:

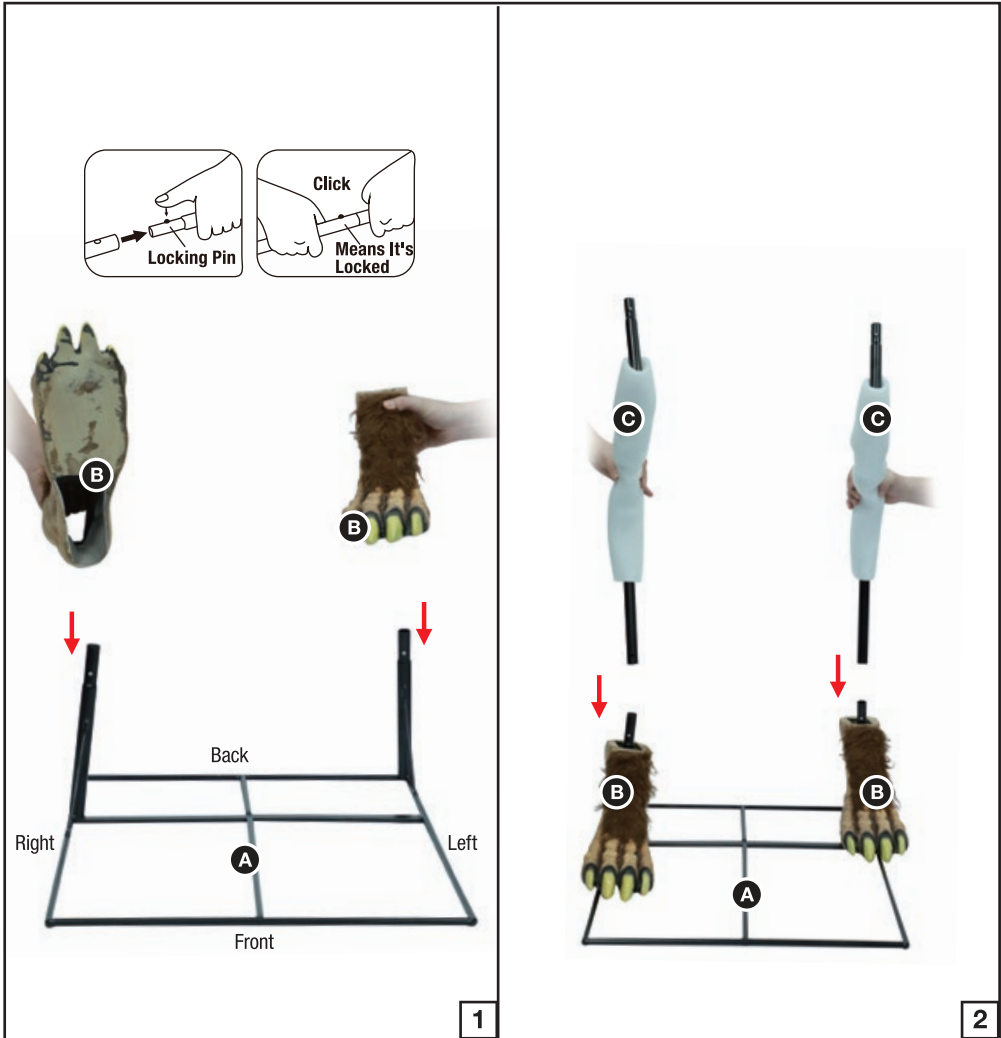

STEP 1
Note: Left and right are from the character's point of view.
Place the (B) Feet onto the (A) Base as shown in Figure 1.1. Then connect the (C) Lower Support Poles to the (A) Base using the available quick connect push buttons and pre-drilled holes as shown in Figure 1.2.

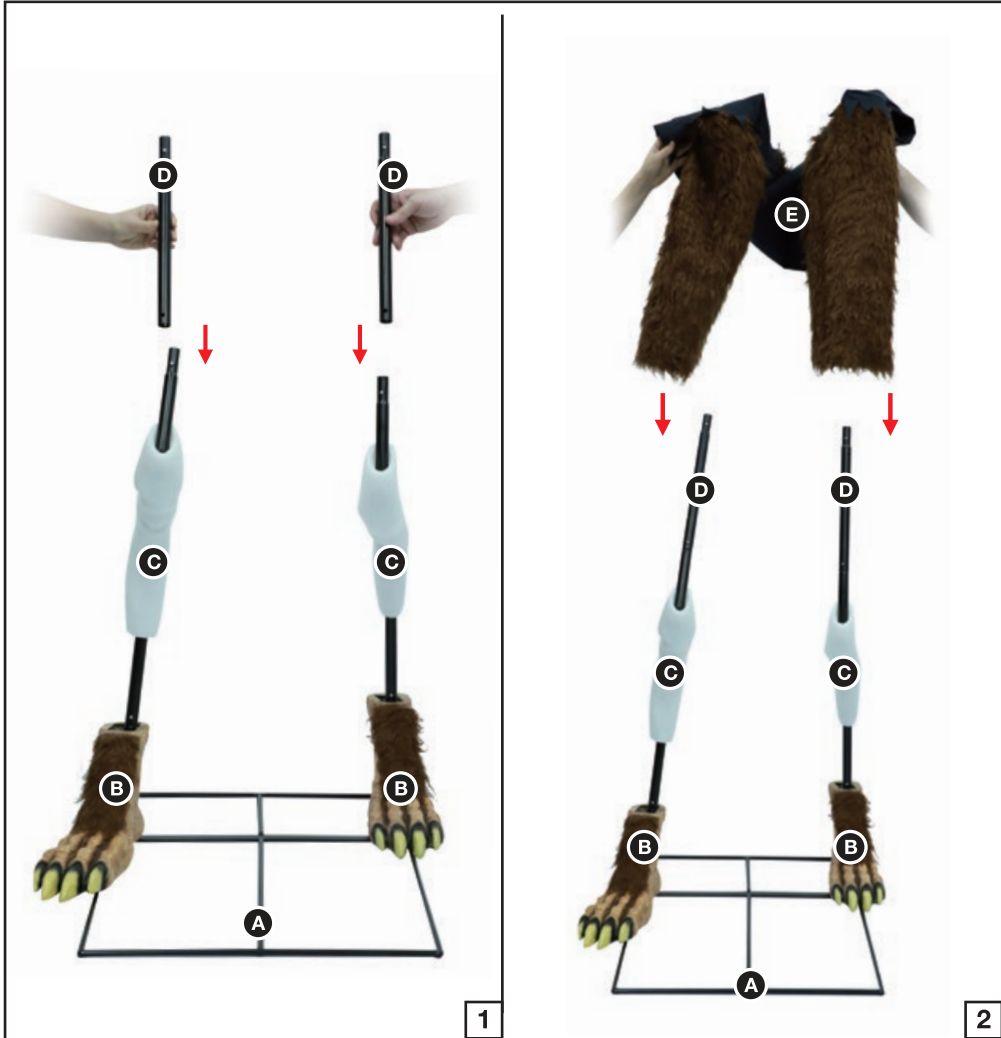


STEP 2
Connect the (D) Support Poles to the (C) Lower Support Poles using the available quick connect push buttons and pre-drilled holes as shown in Figure 2.1. Then slide the (E) Pants over the assembled poles as shown in Figure 2.2.

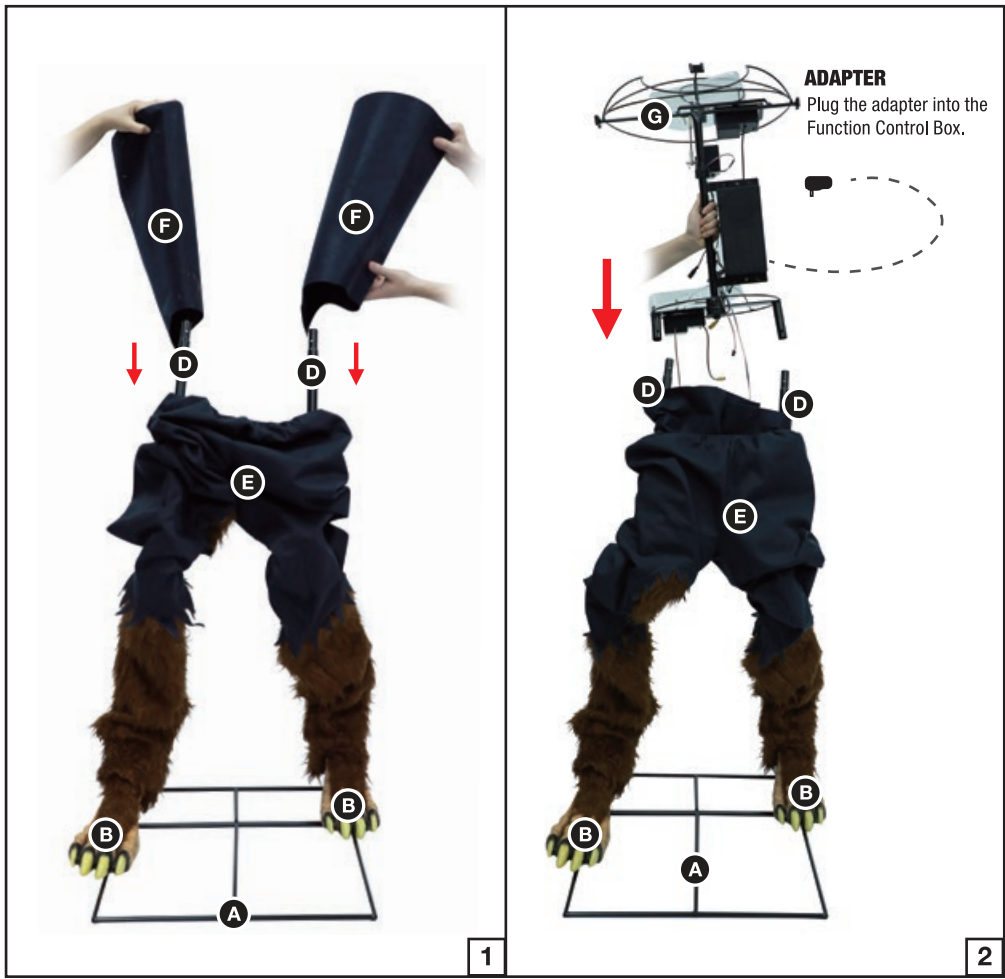


STEP 3

Slide the (F) Leg Inserts over the (D) Support Poles but inside of each pant leg of the (E) Pants as shown in Figure 3.1. Connect the (G) Torso Frame to the (D) Support Poles using the available quick connect push buttons and pre-drilled holes as shown in Figure 3.2. Now plug in the adapter into the function control box, do not plug into outlet until the item is fully assembled.

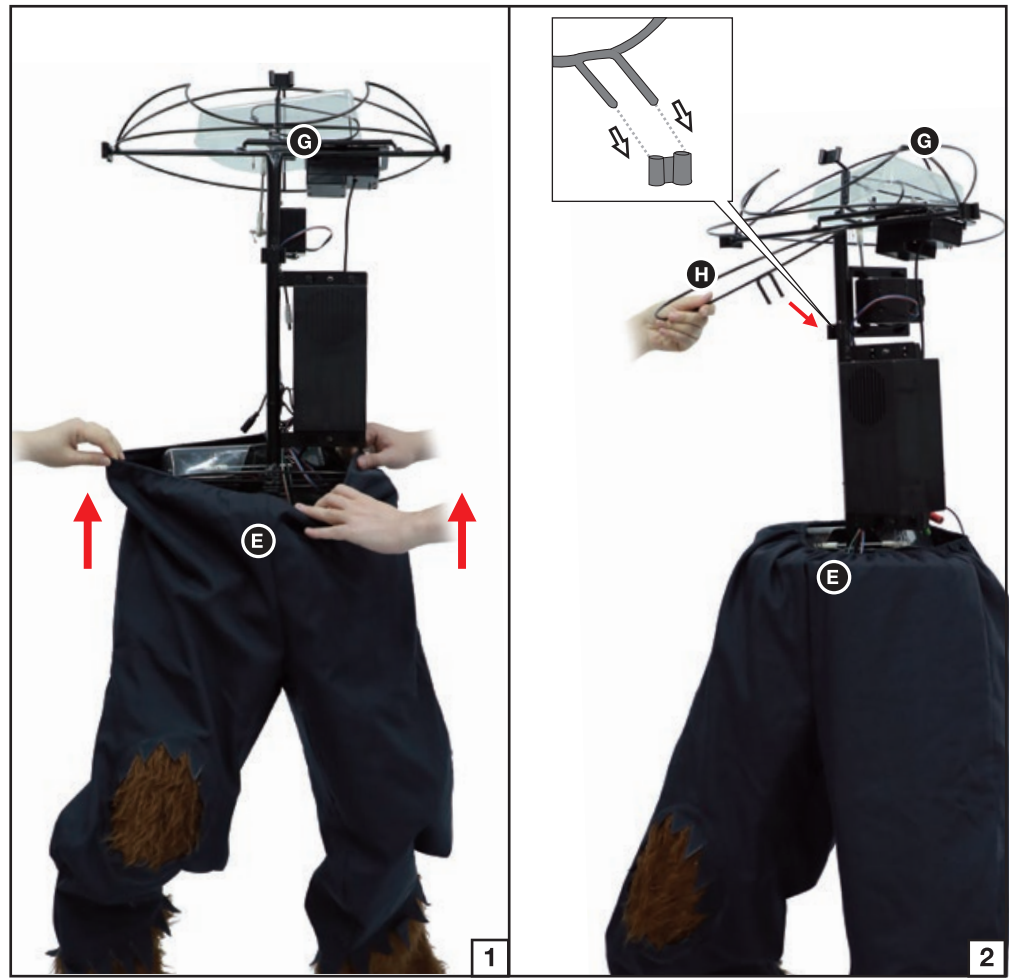

STEP 4

Pull the (E) Pants up over the hoop available on the (G) Torso Frame as shown in Figure 4.1. Slide the forked hook of the (H) Chest Frame into the housing available in the front of the (G) Torso Frame as shown in Figure 4.2.

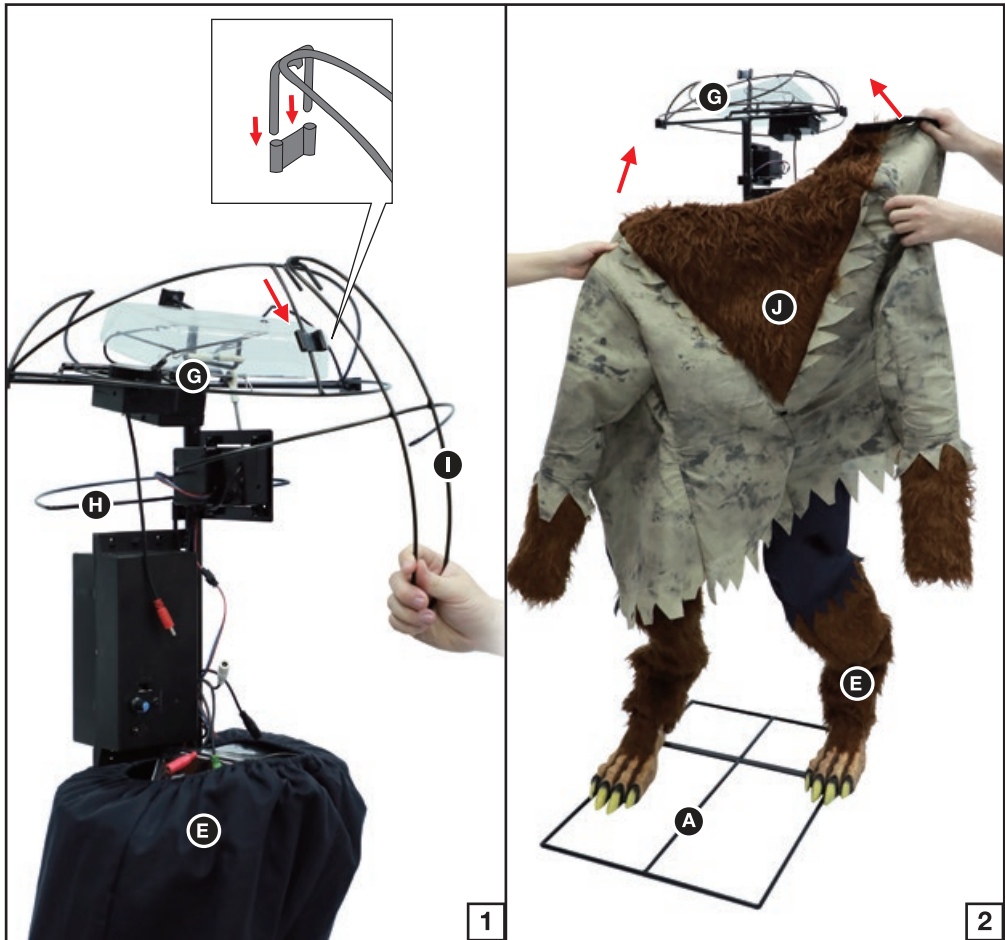

STEP 5

Slide the forked hook available on the (I) Back Frame into the forked hook housing available at the back of the (G) Torso Frame as shown in Figure 5.1. Place the (J) Shirt over the (G) Torso Frame with the opening towards the back as shown in Figure 5.2.




STEP 6

Slide the (K) Right Arm up the right sleeve of the (J) Costume. Then set the forked hook of the (K) Right Arm into the forked hook housing available on the right side of the (G) Torso Frame. Then slide the (L) Left Arm up the left sleeve of the (J) Costume. Set the forked hook of the (L) Left Arm into the forked hook housing available on the left side of the (G) Torso Frame as shown in Figures 6.1 and 6.2.



STEP 7
Slide the forked hook available on the (M) Head into the forked hook housing available on the top of the (G) Torso Frame as shown in figure 7.1. Attach the (N) Sensor to the (J) Costume using the hook and loop closures available as shown in Figure 7.2. Connect all cables according to their shape and color as shown in Figure 7.3. Then secure the hook and loop closures available at the back of the (J) Costume as shown in Figure 7.4.

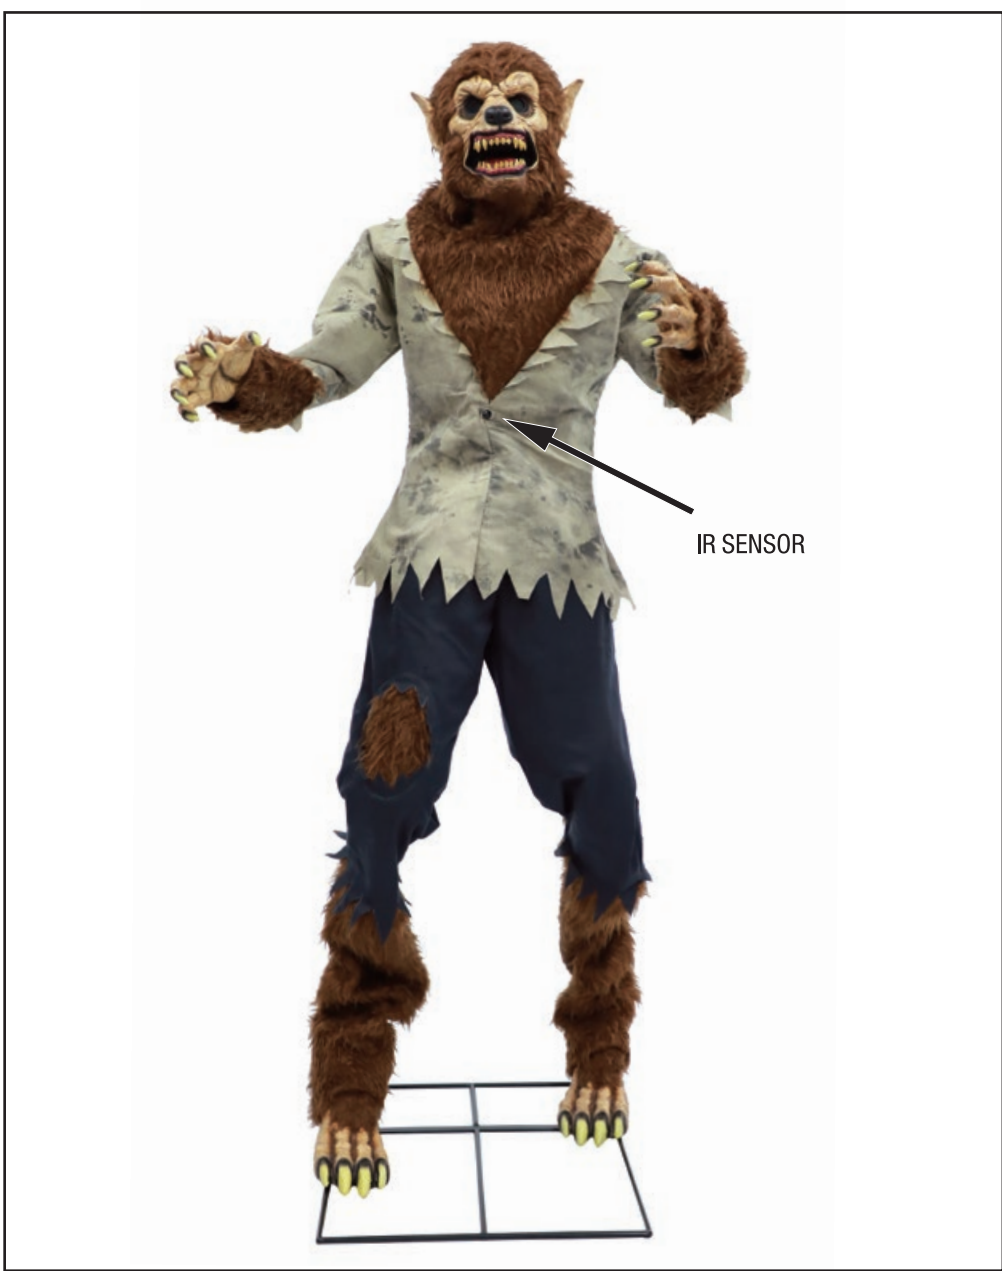

Your Werewolf is now fully assembled. Plug in and turn on to let the fun begin!

OPERATION INSTRUCTIONS:

1. Plug the power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the Torso Frame, as desired.
2. Settings:

Sensor /Détecteur	This switch mode will activate lights, sound, and animation when the Infra-red (IR) sensor is activated and will operate for 1 audio-cycle with each activation. The Infra-red (IR) sensor has a range of up to 2 m/6.5 ft. and will activate when someone comes within an 80-degree angle from left-to-right, as well as from above and below.
O/OFF	This switch mode will turn the lights, sounds, and animation off.
I / ON	This switch mode will continually operate the lights, sound, and animation of the item.
	Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off .

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.
Seasonal Visions International, Emeryville, CA 94608 (1-855) 428-3921.

