



Polyester Blow Up Figure

Operating Instructions



BEFORE USING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.

Save these instructions for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- This is a seasonal, decorative product and is not intended for permanent installation or year-round use. Do not use this product for any other purpose.
- Do not use seasonal products outdoors unless they are marked as suitable for indoor and outdoor use.
- This is an electrical, decorative product; not a toy.
- Keep the product out of the reach of children and pets to avoid the risk of fire, burns, electrical shock, or serious personal injury. Extra caution is necessary when using this product near children. Do not allow children or pets to play near the product.
- Always unplug the product from the electrical outlet when leaving the house, retiring for the night, or when it is not in use.
- Do not mount or place near gas or electric heaters, fireplaces, candles, or similar sources of heat.
- Do not use attachments not recommended or sold by the product manufacturer, as a risk of fire, electrical shock, or serious personal injury may result.
- Do not use anything with this product that is not included in the original manufacturer's packaging at the time of purchase for this product.
- Do not expose the product to sharp or pointed items, as these items may rupture and damage the product.
- Inspect the cord Power Cord for damage before each use. If the Power Cord shows wear and tear, fraying, the insulation is cut, or wires are exposed, do not use the Power Cord.
- If an extension cord is required for use of this product, the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the product. Use only extension cord sets rated for both indoor and outdoor use.
- Always connect the product to a Ground Fault Circuit Interrupter (GFCI) electrical outlet when using the product in outdoor applications. Contact a qualified electrician to have a GFCI electrical outlet installed if one is not available.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not close a door or window onto the power cord or extension cords, as this may damage the product's wire insulation.
- Do not cover the product with cloth, paper, or any material not part of the product when in use.
- Do not secure the wiring of the product with staples, nails, or other sharp objects, or place the wiring on sharp hooks or nails.
- Do not insert hands or fingers into the lamp sockets.
- Do not let bulbs rest on the power supply cord or any other wire.

WARNING: This product is equipped with a polarized plug (one blade is wider than the other blade) as a safety feature to reduce the risk of electrical shock. This plug will fit into a polarized outlet only one way. This is a safety feature. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless you can fully insert the plug into the extension cord. Do not alter the plug. Do not attempt to defeat the safety purpose of the polarized plug.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

Parts Identification

Check to ensure all parts listed are included in the product packaging.

- Inflatable Figure
- UL Approved Adaptor/Fan
- Stakes and tether

To Set Up and Use

1. Remove contents from packaging.
2. Plug adaptor into connection at base of Inflatable. Plug adaptor plug into standard wall outlet.
3. Fan will immediately begin to start the flow of air.
4. Zip zipper at base of fan. Inflatable will then fully inflate.
5. To secure the Inflatable Figure to the ground, insert a Stake into the ground through each of the holes in the lower tabs of the Inflatable Figure. There are further fabric loops located on each side of the inflatable. Tie one end of rope to each loop. Tie the other end of the ropes to the remaining ground stakes and force them into the ground at an approximate 45° angle at each corner of the inflatable
6. To deflate, unplug fan. For faster deflation, unzip zipper after unplugging fan.

Care and Maintenance

- Periodically check to ensure there are no ruptures or tears in the Inflatable Figure. If you find any tears in the fabric, you can repair them with needle and regular thread. No special thread is necessary.
- Always maintain the air vent of the Motor Base unobstructed and free from dirt and/or debris.
- Periodically unplug the product from the electrical outlet and allow the Motor to cool to avoid overheating and/or product damage. At least every five hours with at least 20 minutes to cool down.
- Neatly fold and store the product in a cool, dry location that is away from sunlight or heat sources.

Troubleshooting Guide

Item will not fully inflate.	Ensure zippers on the back of each product character are closed. Ensure fabric collar is securely attached to the fan outlet. Inspect fabric for tears and holes; repair if necessary. Ensure fan inlet is free of debris. Unplug fan from the electrical outlet before inspecting.
Fan does not operate.	Ensure fan is plugged into a working 120-volt AC electrical outlet. Fan may be overheated. Unplug fan from the electrical outlet and let cool completely. Fan may be short-circuited. Only operate fan in a protected location away from rain and snow.

Made in China