

PARTS LIST:

ASSEMBLY INSTRUCTIONS FOR FUN4722 BUZZHEAD BUTCHER
THIS IS NOT A TOY. 14+ AGE. PLEASE FOLLOW DIRECTIONS FOR EASY SET-UP.

Product number:FUN4722

Company name:FUN.com

Company website: www.fun.com



ONCE ASSEMBLED AND PLUGGED-IN, BUZZHEAD WILL HAVE AUDIO, LIGHT-UP EYES, MOVING SAW AND FRONT TO BACK MOVEMENT. ITEM WORKS WITH OR WITHOUT STEP PAD. WHEN POWER SWITCH IS SET TO ON, BUZZSAW IS ACTIVATED BY SOUND SENSOR. TO ACTIVATE BY STEP PAD, SET POWER SWITCH TO OFF. KNOB ON CHEST/MODULE SPEAKER BOX ADJUSTS VOLUME.

BUZZHEAD BUTCHER WILL BE BUILT FROM THE FLOOR UP.


STEP 1

Lay base on floor, pegs up and large section forward.

Attach Leg Poles – 2 on each side.

Slide Shoes over top of poles

Slide Pants over top of poles

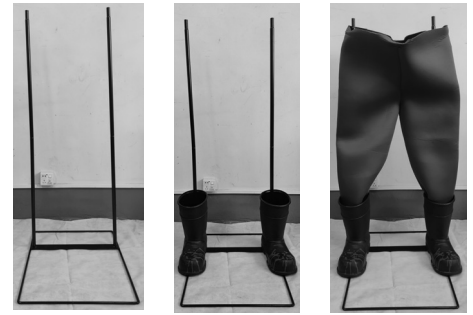


STEP 2

Attach Chest/Module to top of Leg Poles, speaker facing back

Attach Waist Ring to base of Chest/Module

Lift Pants over Waist Ring

Add Shoulder Frame to top of Chest/Module

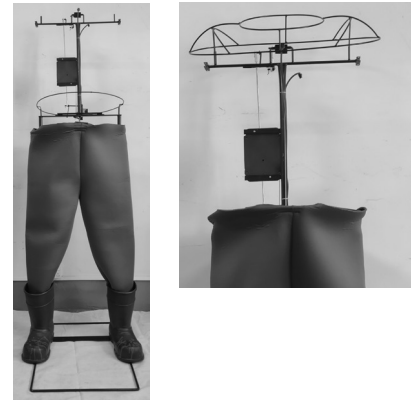

STEP 3

Drape Shirt over upper body, opening facing back

Attach Head to top of Chest/Module through Shoulder Frame

Connect wires from Chest/Module to Head



STEP 4

Inset Arms through sleeves to attach at shoulder of Chest/Module

Attach Hands to bottom of Arms



STEP 5

Add Apron to body

Connect Plug to speaker box (right jack)

Connect Step Pad to speaker box (left jack)



FCC: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver.
- Consult the dealer or an experienced radio TV technician for help.