

FUN5941-ST Ghostbusters Scoleri
Brothers Tony Scoleri Animatronic Decor

LIST OF ACCESSORIES


A: Chest piece

B: upper part of body

C: sound box



1: The light sensor connector buckle is fastened with the sound box connector buckle

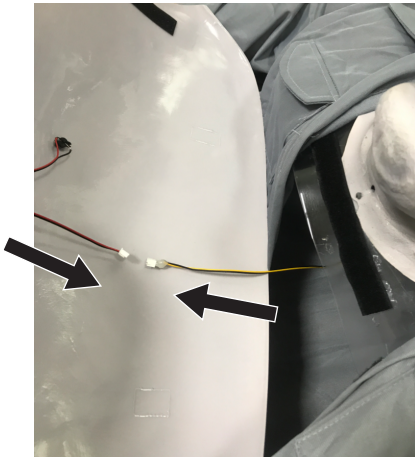

2. Velcro for both chest piece and clothing



Finished product display



switch



sound box with three AA 1.5V batteries

