


LED ANIMATED LUMBERING ZOMBIE™

INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN
WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING. ESTIMATED ASSEMBLY TIME TEN MINUTES.

PARTS

- 1. METAL BASE
- 2. LOWER LEG POLES
- 3. UPPER LEG POLES
- 4. SHOES
- 5. CONTROL BOX
- 6. PANTS WITH WAIST HOOP INSIDE
- 7. HEAD WITH BODY
- 8. ARMS WITH FOAM
- 9. HANDS

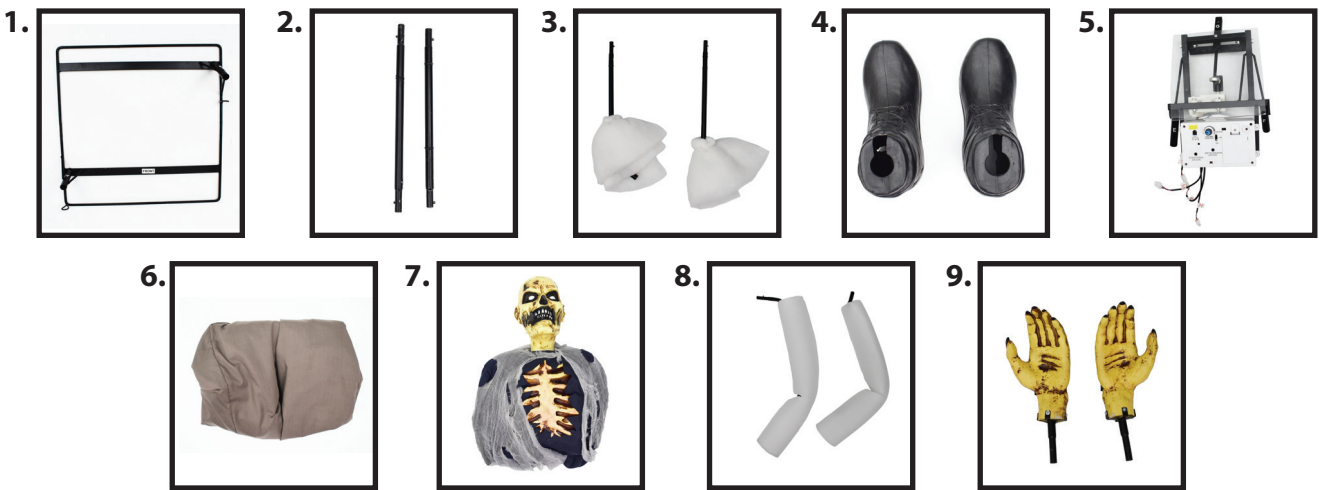


ASSEMBLY



1. Snap lock the right LOWER LEG POLE labeled A to the METAL BASE.

MATCH A TO A

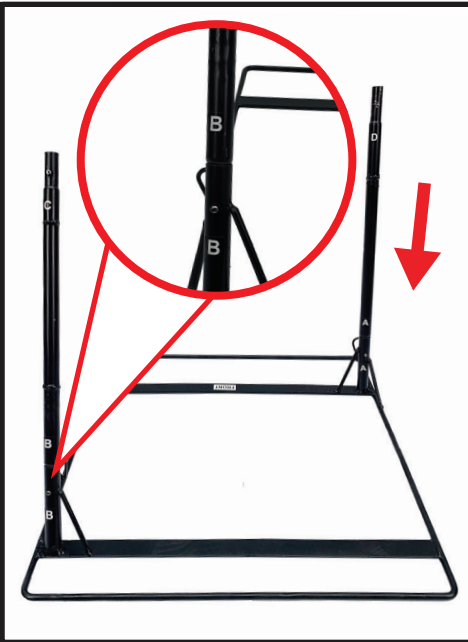

2. Snap lock the left LOWER LEG POLE labeled B to the METAL BASE.

MATCH B TO B



3. Slide both SHOES onto the LOWER LEG POLES to the METAL BASE.



4. Snap lock the left UPPER LEG POLE labeled C to the left LOWER LEG POLE.

MATCH C TO C



5. Snap lock the right UPPER LEG POLE labeled D to the right LOWER LEG POLE.

MATCH D TO D



6. Slide PANTS over the LEG POLES to the SHOES. Match label on PANTS marked FRONT to label on METAL BASE marked FRONT.



7. Snap lock the CONTROL BOX labeled E and F onto the UPPER LEG POLES.

MATCH E TO E
MATCH F TO F



8. Snap lock the HEAD WITH BODY labeled G onto the CONTROL BOX.

MATCH G TO G

ASSEMBLY



9. Snap lock the left ARM WITH FOAM labeled H to the HEAD WITH BODY.

MATCH H TO H



10. Snap lock the right ARM WITH FOAM labeled I to the HEAD WITH BODY.


MATCH I TO I



11. Snap lock the left HAND labeled J to the left ARM WITH FOAM. Attach hook and loop fasteners on HAND and sleeve on ARM WITH FOAM.
MATCH J TO J




12. Snap lock the right HAND labeled K to the right ARM WITH FOAM. Attach hook and loop fasteners on HAND and sleeve on ARM WITH FOAM.
MATCH K TO K

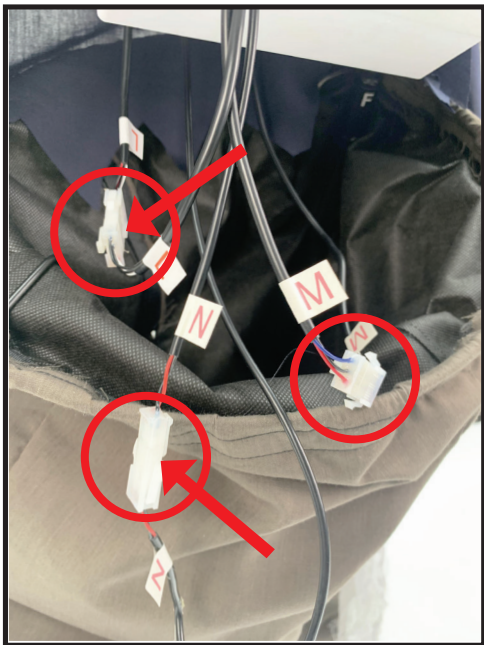


13. Connect wires to the CONTROL BOX.

MATCH L TO L
MATCH M TO M
MATCH N TO N

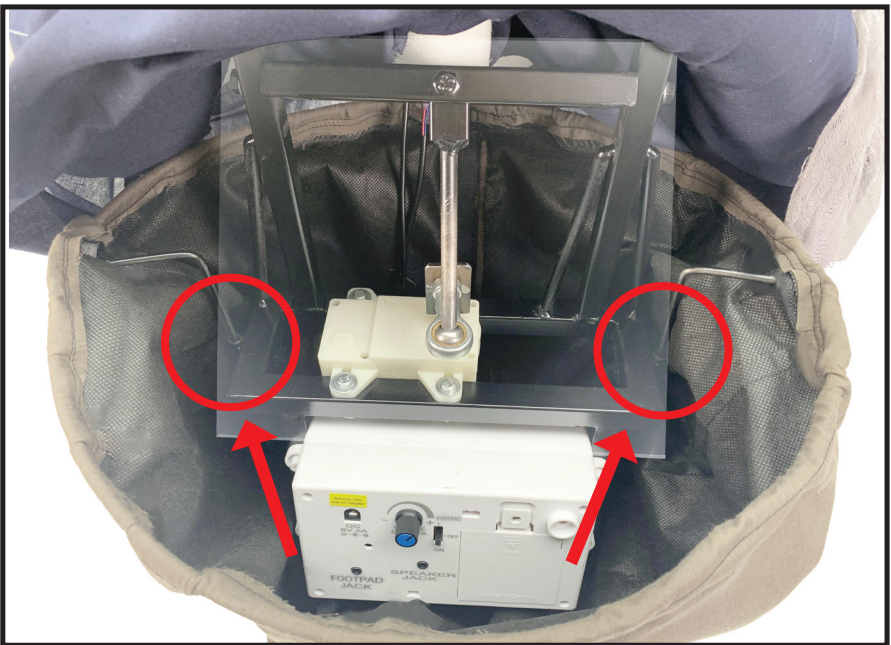

14. Pull PANTS up and INSERT waist hoop posts into waist frame on the CONTROL BOX.

OPERATING INSTRUCTIONS

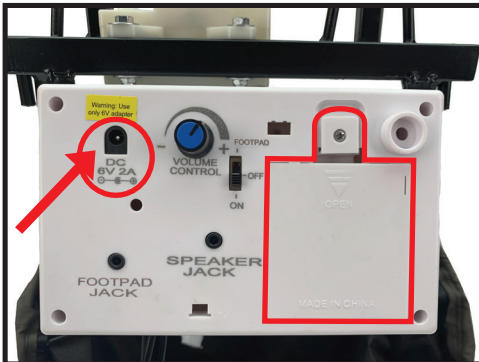

Plug in the 6V 2A ADAPTER (not included) or insert 4 AA BATTERIES (not included) into the battery compartment located on the CONTROL BOX.



Move the switch to the ON position. Move in front of the item or make a loud sound (clap) to activate the item.


Turn the item to the OFF position when not in use.

OPTIONAL FOOTPAD SET UP

FOOTPAD MUST BE PURCHASED SEPARATELY.

- 1. Insert the cable from optional footpad into the jack labeled FOOTPAD JACK on the CONTROL BOX.
- 2. Place the switch in the FOOTPAD position to enable FOOTPAD activation.
- 3. Step on the FOOTPAD to activate the scary sequence!


*Footpads are sold separately and can be purchased at www.tekkyaccessories.com

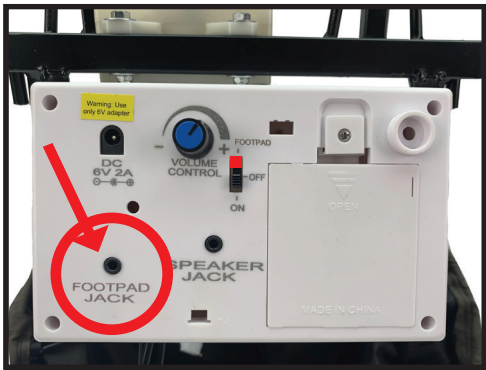

OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

- 1. Plug speaker cord into the jack labeled SPEAKER JACK located on the CONTROL BOX.
- 2. Use volume knob on external speaker to control volume levels.

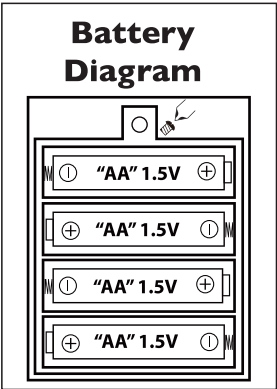

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.



visit us at tekkydesign.com

Requires 6V 2A ADAPTER (not included)
or 4AA batteries (not included)

ALL NEW MATERIALS:
METAL, FOAM, PLASTIC, POLYESTER
Surface washable only.

LED ANIMATED LUMBERING ZOMBIE™
is a trademark of Tekky.
Copyright © 2024 Tekky.
All Rights Reserved.
MADE IN CHINA

SMART PHONE SCAN
SETUP VIDEO

