

EASY ASSEMBLY AND OPERATION INSTRUCTIONS

FUN97150 Clown Ferris Wheel



Please follow the step by step guide and enjoy your Clown Ferris Wheel!

Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

CARE AND STORAGE INSTRUCTIONS

For best performance operate your item indoors. When not in use, store this product in its original packing. Keep away from heat and moisture.


⚠ WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children.

1. Please use the adapter supplied by manufacturer.
2. Please assemble item according to instructions. Connect all wires according to matching color.
3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard.
4. Keep all away from the adapter, as it heats up during operation.

PARTS LIST

- A. Base x 1
 - B. Lower Support Poles x 2
 - C. Support Pole x 1
 - D. Support Pole with Function Box x 1
 - E. Motor Frame x 1
 - F. Right Support Poles x 5
 - G. Left Support Poles x 5
 - H. Right Function Box Cover x 1
 - I. Left Function Box Cover x 1
 - J. Ties x 8
 - K. Gondolas x 5
 - L. Gondola Supports x 5
 - M. Gondola Poles x 5
 - N. Clown-1 x 1
 - O. Clown-2 x 1
 - P. Clown-3 x 1
 - Q. Clown-4 x 1
 - R. Clown-5 x 1
 - S. Adapter (Included) x 1
- Input: 100 - 240VAC 50/60Hz
Output: 5.9V 2.0A

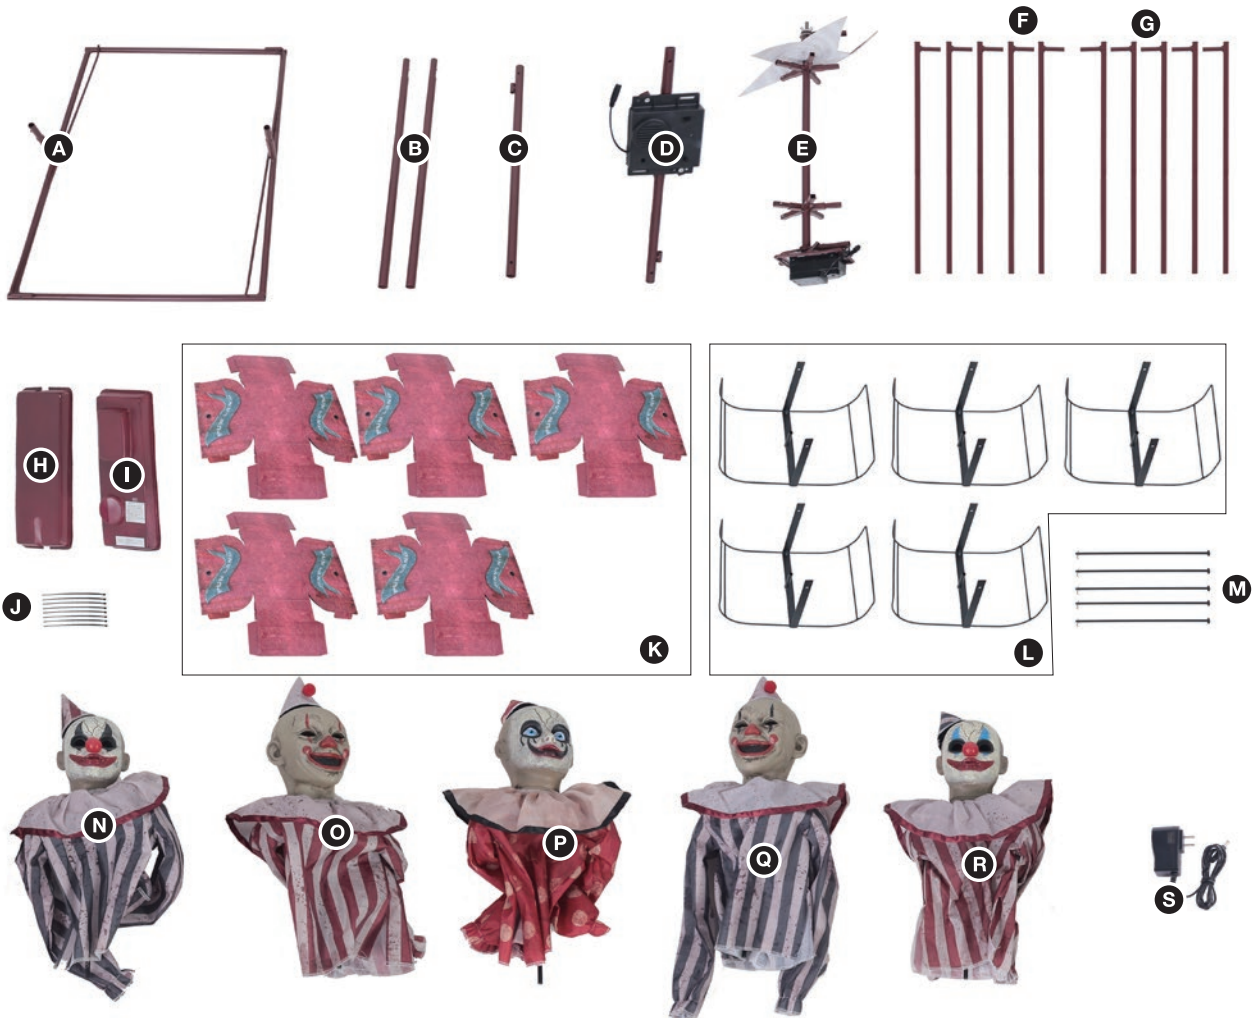

BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT AND CONTACT CUSTOMER SERVICE AT CUSTOMERSERVICE@SVICHINA.COM

Assembly Instructions:

1

2

3

4

5

6

7

8

9

10

STEP 1

Attach the (B) Lower Support Poles to the (A) Base and secure by aligning the quick-connect push buttons into the pre-drilled holes as shown in Figure 1.

Set the brace located on the (A) Base into the housing located on the (C) Support Pole. Assemble the (C) Support Pole to the (B) Lower Support Pole by aligning the quick-connect push button into the pre-drilled hole as shown in Figure 2.

Set the brace located on the (A) Base into the housing located on the (D) Support Pole with Function Box. Assemble the (D) Support Pole with Function Box to the (B) Support Pole by aligning the quick-connect push button into the pre-drilled hole as shown in Figure 3.

1

2.1

2.2


3

STEP 2

Attach the (E) Motor Frame to the (C) Support Pole and (D) Support Pole with Function Box and secure by aligning the quick connect push buttons into the pre-drilled holes as shown in Figure 1.

Attach the (F) Right Support Poles to the (E) Motor Frame and secure by aligning the quick connect push buttons into the pre-drilled holes as shown in Figure 2.1.

Attach the (G) Left Support Poles to the (E) Motor Frame and secure by aligning the quick connect push buttons into the pre-drilled holes as shown in Figure 2.2.

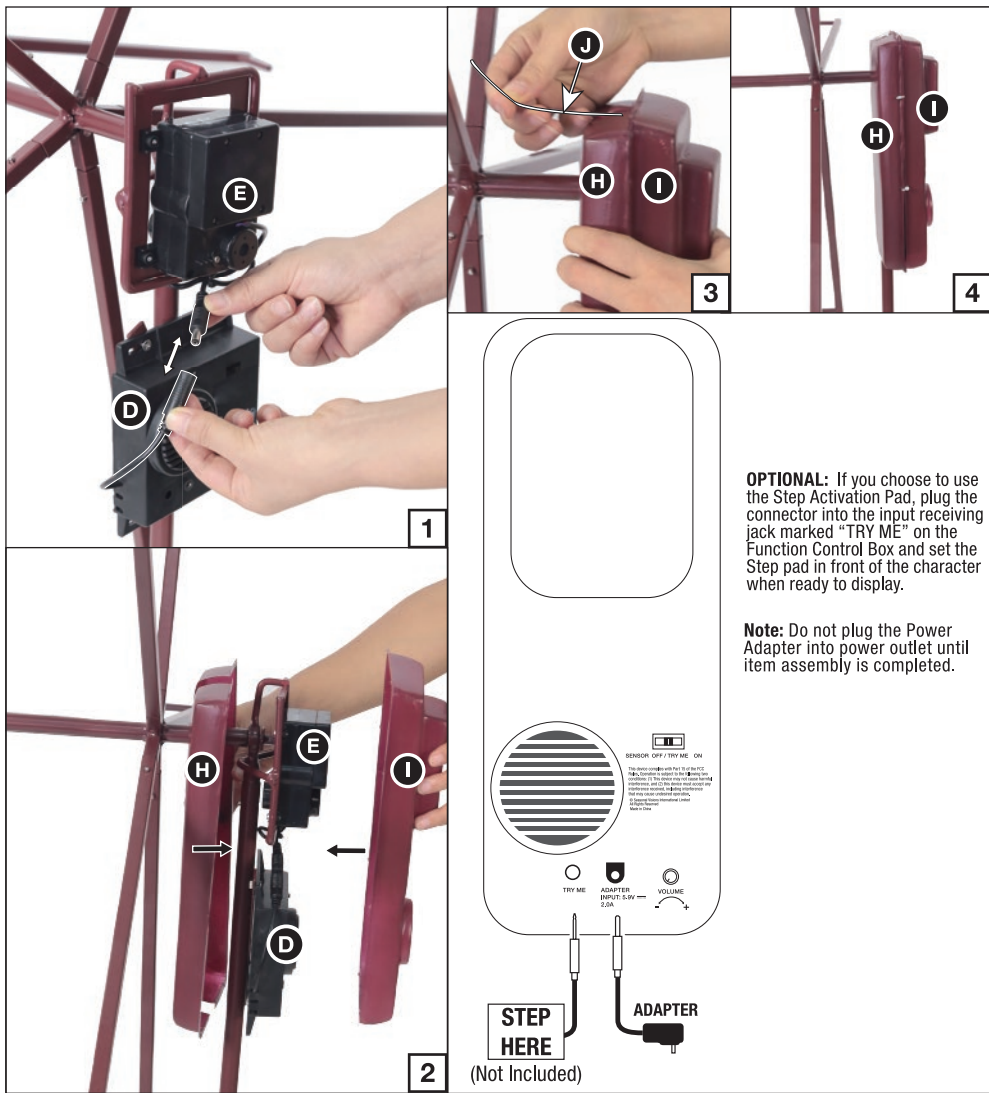

STEP 3

Connect the cable from the (D) Support Pole with Function Box to the color-coordinated cable on the (E) Motor Frame as shown in Figure 1.

Attach the (H) Right Function Box Cover and the (I) Left Function Box Cover onto the (D) Support Pole with Function Box and (E) Motor Frame as shown in Figure 2.

Then use the (J) Ties to tie the (H) Right Function Box Cover and the (I) Left Function Box Cover as shown in Figure 3 and 4.

Now, plug the Adapter into the input receiving jack marked "DC 5.9V" on the Function Control Box and route the Power Adapter down and out the bottom of the item.




STEP 4

Fold the (K) Gondola as shown in Figure 1.

Put the (L) Gondola Support into the (K) Gondola as shown in Figure 2.

Pull out the Pin located on the (M) Gondola Pole as shown in Figure 3.

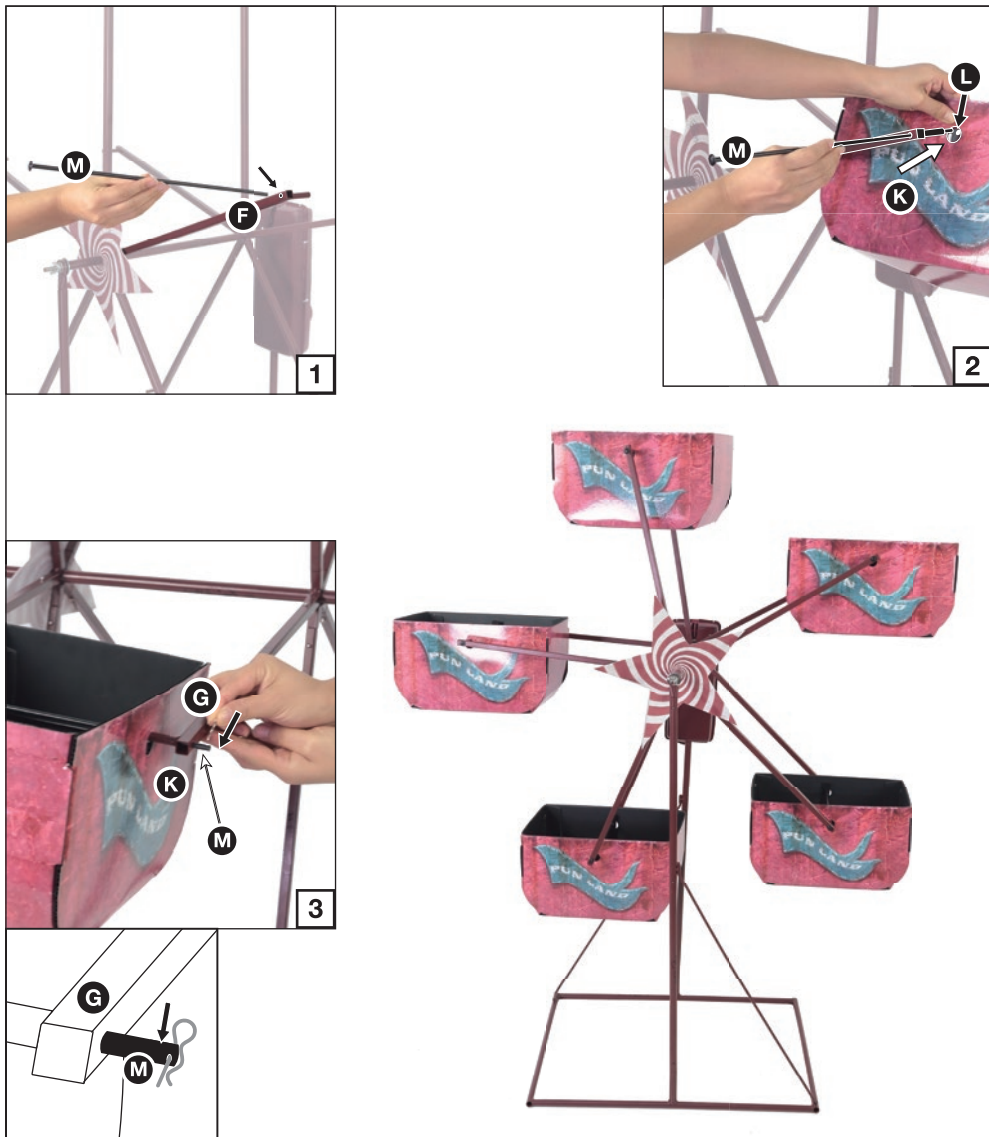

STEP 5

Put the (M) Gondola Poles through the (F) Right Support Poles as shown in Figure 1.

Continue to put the (M) Gondola Poles through the (K) Gondolas, (L) Gondola Support and the (G) Left Support Poles as shown in Figure 2 and 3.

Then insert the Pin into the hole of the available peg on the (M) Gondola Pole to fasten them in place as shown in Figure 3.



STEP 6

Attach (N) Clown-1, (O) Clown-2, (P) Clown-3, (Q) Clown-4, and (R) Clown-5 to the (L) Gondola Supports as shown in Figures 1-5.



Your Clown Ferris Wheel is now fully assembled. Plug in and turn on to let the fun begin!

OPERATION INSTRUCTIONS:

- 1. Plug the power adapter into a standard power outlet and adjust the settings on the Function Control Box, located on the (D) Support Pole with Function Box, as desired.
- 2. Settings:

SENSOR	This switch mode will activate sound and animation when the sound sensor is activated and will operate for one activity cycle with each activation.
OFF/TRY ME	This switch mode allows the item to be activated only if triggered by using a Step Here Try Me Activation Pad. The item will operate for one activity cycle with each Try Me activation. Refer to Assembly Instructions Step 3 for further details.
ON	This switch mode will continuously operate the sound and animation of the item.
	VOLUME - Raise or lower the volume using the volume control turn dial, turn all the way down to turn the volume off.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help. Seasonal Visions International, Berkeley, CA 94710, CUSTOMERSERVICE@SVICHINA.COM

IMPORTANT SAFETY INSTRUCTIONS -SAVE THESE INSTRUCTIONS

DANGER! TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK READ AND FOLLOW ALL SAFETY INSTRUCTIONS:

Read and follow all instructions that are on the product or provided with the product. For a cord-connected or direct plug-in power unit, do not use an extension cord. Reference the National Electrical Code, NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction. For a cord-connected or direct plug-in power unit, do not install or use within 10 feet of a pool.

WARNING: Risk of electric shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.

WARNING: Risk of Fire. Installation involves special wiring methods to run wiring through a building structure. Consult qualified electrician.

